


FOAMING DISINFECTANT DETERGENT



- **Medical Surgical Device n. 19113 active chlorine foaming (P.M.C.)**
- **Suitable for floors, sinks, dressing rooms, bathrooms and showers**
- **Compatible with chrome steel, plastic, ceramic, ...**

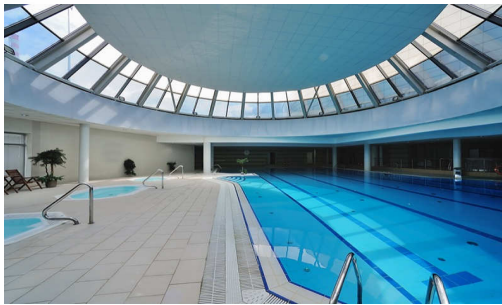

FOAMING DISINFECTANT DETERGENT

SUGGESTIONS

Suitable also for bleaching and cold disinfection of fabrics at a concentration of 1%. Leave it immerse for 45 minutes and rinse. Do not use for delicate, colored or silk clothes. Irreplaceable in all frequented environment subject to cross-contamination.

DESCRIPTION

The main source of bacteria transmission takes place in bathrooms, locker rooms and clinics. It is fundamental ensuring the hygiene in environments frequented by many people.

GEMINI CLEANER is specifically formulated for the cleaning and disinfection of sinks, bathroom fixtures, tiled floors and linoleum, general hard surfaces. If used daily, it gives shiny appearance to steel, ceramic and porcelain accessories. The disinfectant action is done by the active chlorine that removes bacteria, fungi and yeasts. The product breaks down and avoids unpleasant odors formation. Do not required rinsing if diluted. Suitable for gyms, hotels, schools, kindergartens, offices, swimming pools, spa, etc.

Active against Lysteria and Salmonella in these cases as well:

- disinfection of hard surfaces with rubbing application, tested according to EN 16615 (medical area), EN 14476 (all application area),
- disinfection of hard surfaces with low pressure spray application, tested according to EN 16615 (medical area), EN 13697 and EN 14476 (all application area),
- disinfection of tools and instruments for soaking, tested according to EN 14561 and EN 14562 (medical area), EN 13697 and EN standards 14476 (all application area).

FOAMING DISINFECTANT DETERGENT

PHYSICAL AND CHEMICAL CHARACTERISTICS

Appearance	Slightly viscous liquid
Color	Pale yellow
Odour	Chlorine scented
Specific weight	1.080 ± 0.01 g/ml
Solubility in water	Complete at any ratio
Active chlorine	3.5 ± 0.3%
Chemical properties	Anionic - cationic
pH	12 - 13
Validity	6 - 8 months



FOAMING POWER

Moderate

AVAILABLE PACKAGING

Carton with 4 cans of 5L - 016GEM10020

USE MODALITY

Disinfecting of surfaces:

Use the product in a 3% concentration (chlorine = 1050 ppm) and leave to work for 15 minutes before rinsing.

To ensure a virudice effect, the contact time is 60 minutes.

Dusting operations:


Use the product in a 0.5%-1% concentration (chlorine = 175-350 ppm). No rinsing required.

CORRELATED PRODUCTS ACCESSORIES


Micro roll
01AA770785



Spugna con abrasivo delicato
01AA770642

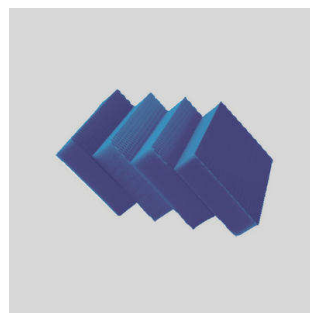

Telaio lock
01AA770672

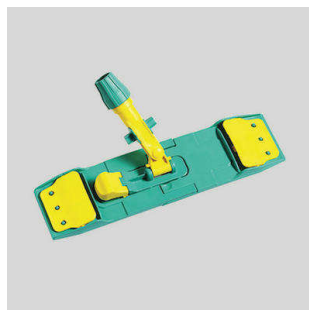

Panno wet system micro safe
01AA770671



Gemini pronto
016GEPR7512



Gemini room
016GERO7512

